

OPERATION MANUAL

CH6311X Series

Programmable DC Electronic Load

BEICH

CHANGZHOU BEICH Electronic Technology Co.,Ltd

Precautions:

This manual is copyrighted by Changzhou BEICH Electronic Technology Co., Ltd and BEICH Electronics reserves all rights.No part of this manual may be photocopied,reproduced,or translated without the prior written consent of BEICH Electronics.

The manual is available for CH6311X Series Programmable DC Electronic Load

The information contained in this manual is subject to change without notice. The latest manual electronic documents can be downloaded from the official website of BEICH Electronics:

<http://www.BEICH.com.cn>

September, 2020 First edition.

Company

The descriptions in this manual may not be all the contents of the instrument.BEICH Electronics has the right to improve and improve the performance,function,internal structure, appearance, accessories, packaging, etc. of this product without further explanation!The resulting specification is inconsistent with the instrument.Confused,can contact my company

Safety warning:

 **Electric shock hazard**

Be careful not to get an electric shock during operation, testing and maintenance of the instrument.

Non-professionals should not open the case without authorization. If the professional needs to replace the fuse or perform other maintenance, be sure to unplug the power plug and carry it with someone.

Even if the power plug has been removed, there may be dangerous voltage on the capacitor. It should be discharged after a few minutes.

Do not replace or adjust the internal circuits and components of the instrument without authorization!


Please use the power supply according to the power supply parameters specified in this instrument. Power input that does not meet the specifications may damage the instrument.

 **Input power**

Please use the same specifications when replacing the fuse

 **Keep away from explosive gas environment**

Electronic instruments should not be used in flammable or explosive atmospheres or in corrosive gases or soot environments to avoid danger.

 **Other safety matters**

Do not apply an external voltage source or current source to the test terminals of this instrument and other input and output terminals.

Do not input AC voltage at the input.

Always observe all safety precautions in any process that uses the equipment for operation and maintenance. Neglecting and not complying with these safety measures and the warnings in this manual will not only affect the performance of the instrument, but may also cause direct damage to the instrument and may endanger personal safety. BEICH Electronic Technology Co., Ltd. does not bear any consequences for the consequences of not complying with these safety precautions.

Table of Contents

USER'S MANUAL	1
Table of Contents	1
CHAPTER I READY TO USE	4
1.1 Check shipment	6
1.2 Check the power supply	6
1.3 Installation fuse	6
1.4 Connecting the power cord	7
1.5 Environmental requirements	7
1.6 Start the instrument	7
CHAPTER II OVERVIEW	9
2.1 Product Introduction	9
2.2 Technical parameters	10
2.3 Front panel introduction	11
2.4 Rear Panel Introduction	12
2.5 Display area introduction	13
CHAPTER III MENU OPERATION	14
3.1 Load page	14
3.1.1 Normal page test operation	15
Constant current mode of operation (CC)	15
Constant voltage mode of operation (CV)	15
Constant power mode of operation (CP)	16
Constant resistance mode of operation (CR)	16
CC+CV mode	17
CR+CV mode	17
3.1.2 Quick charge QC2.0 test page	17
3.1.3 Quick charge QC3.0 test page	17
3.1.4 PD2.0 test page	18
3.1.5DPDN(D+D- voltage test) test page	18

3.2 Setting page	19
3.2.1 Load Settings Page.....	19
Remote measurement.....	19
Delayed shutdown.....	19
Electric flow range.....	19
Maximum current.....	20
Voltage range.....	20
Maximum voltage.....	20
Maximum power.....	20
Starting voltage.....	21
Shutdown voltage.....	21
Rising rate.....	21
Rate of decline.....	21
3.2.2 Quick charge setting page.....	21
3.2.3 Limit Settings Page.....	22
3.2.4 System Settings Page.....	22
3.2.5 File List Page.....	24
Storage and call.....	24
Storage function.....	24
Call function.....	24
Storage media type.....	24
3.2.6 ListTest Page.....	28
Prompt: Enter the test results page, and you can see the test data and judgment results of each step.	30
3.2.7 List Test Page.....	30
3.2.8 LED Test Page.....	32
3.2.9 System Information Page.....	33
3.2.10 Firmware Upgrade Page.....	33

APPENDIX A REMOTE MEASUREMENT AND EXTERNAL TRIGGER..... 35

A1 Remote measurement.....35

A2 External trigger.....35

A3 Pin configuration.....35

APPENDIX B REMOTE CONTROL..... 36

B1 RS232C Remote control system 36

Chapter I Ready to use

Thank you for purchasing and using our products. Please check and check according to the random packing list before using this instrument. If there is any discrepancy, please contact our company as soon as possible to protect your rights.

1.1 Check shipment

After receiving this product, please carefully unpack and check according to the following procedure:

WARNING: If the appearance of the electronic load (such as the enclosure, front/rear panel, LCD screen, power switch, and port connector) is damaged during transport, do not connect the power supply and turn the power switch on, as this may result in a risk of electric shock.

1. Inspect the package or shock absorbing material used to package the electronic load for damage.
2. Check the packing items attached to the electronic load in the box for damage or defects.
3. Check that all of the packing items included with the electronic load are the specified accessories or options.

Standard configuration	Quantity	Remarks
CH6311X HOST	1 set	Model according to the order form
Test connection board	1 set	
Power cable	1 set	Different from country to region
User's manual	1 serving	
Inspection report / certificate	1 serving	

If you have any questions about the above checks, please contact our company or the relevant distributor.

1.2 Check the power supply

Check that the power supply to the electronic load meets the following requirements:

	Claim
Voltage	220/110(1±10%)V AC
Frequency	47~ 63Hz
Max power consumption	30VA

1.3 Installation fuse

Fuse specifications: 250V / 1A slow-blow (Slow-Blow), 5×20mm small fuse

The instrument has a fuse installed at the factory. Replacement fuses are included with

the accessories, please replace them with the specified size fuses!

To check and replace the fuse, unplug the power cord and pull out the fuse holder.

1.4 Connecting the power cord

Check the three-core power cord, one of which is the grounding wire. When connected to a grounded power socket, the electronic load body can be grounded to protect the user and avoid electric shock.

After confirming that the power cord is intact, connect the electronic load to a properly grounded electrical outlet.

WARNING: Do not use a power cord with any signs of damage to avoid electric shock.

WARNING: Use the supplied three-wire power cord with a grounding wire to ensure that the instrument is reliably grounded.

1.5 Environmental requirements

1. Please do not use it in dusty, vibrating, direct sunlight or corrosive gases.
2. When the instrument is working normally, the temperature should be 0°C~40°C, relative humidity $\leq 75\%$, please use the instrument under these conditions as much as possible to ensure the accuracy of the measurement.
3. This instrument has been carefully designed to reduce clutter on the power supply. However, it should be used in a low noise environment. If it is unavoidable, install a power filter.
4. If the instrument is not used for a long time, please store it in the original box or similar box in a ventilated room with a temperature of 5°C~40°C and a relative humidity of not more than 85% RH. The air should not contain harmful impurities of the corrosion measuring instrument. And avoid direct sunlight.
5. The instrument, especially the test leads connected to the device under test, should be kept away from strong electromagnetic fields to avoid interference with the measurement.
6. Keep the proper ventilation space of the instrument to ensure the ventilation and cooling environment of the instrument to prevent the temperature rise inside the machine.
Moderate minimum space requirements: back $\geq 180\text{mm}$, sides $\geq 60\text{mm}$
7. Electrostatic protection ESD: Although the instrument has been carefully designed to enhance the antistatic impact capability, it should be equipped with a suitable working area to avoid electrostatic discharge.
8. Provide enough space around the instrument to quickly cut off the power cord in an emergency.

1.6 Start the instrument

Press the power switch key in the lower left corner of the instrument to make it in the retracted position, then turn on the power, the instrument self-test, load the configuration information, load the initialization information and initialize the test conditions. After all the normal, complete the boot process.

If the instrument is no longer used for a longer period of time, disconnect the power cord from the power outlet or turn off the main switch

Chapter II Overview

The main contents of this chapter: basic product parameters and function introduction, front and rear panel introduction and LCD display summary, and basic operation methods.

2.1 product introduction.

CH6311X series programmable DC electronic load host adopts high-performance ARM processor with high-performance and high-speed sampling AD; The 4.3-inch TFT color screen supports both Chinese and English interfaces, and is easy to operate with the carefully designed guided menu. The display information is rich and comprehensive, and the load operation and fast charging voltage selection are displayed simultaneously; With a higher display resolution of 0.0001, it can more accurately monitor the voltage and current details of the tested product; USB HOST can conveniently use u disk to save data and upgrade firmware; Comprehensive comparator function and HANDLER interface make batch test and systematic test of production line more secure; Has rich and comprehensive load functions: constant current CC, constant voltage CV, constant power CP, constant resistance CR, battery discharge test (real-time discharge curve can be displayed on the screen), dynamic test (dynamic output performance of power supply) and list test (performance of power supply under various load conditions); The flexible software and hardware framework can meet the requirements of user-customized combined test function, thus improving the test efficiency of production line. Intelligent fan control and excellent heat dissipation performance, combined with over-voltage, over-current, over-power, over-heat and voltage polarity reverse connection, make the instrument more reliable and safe; The whole instrument is equipped with RS232 interface as standard, which can be conveniently connected to a computer for real-time data acquisition and instrument control with rich SCPI instruction set.

Electronic load with superior performance can be widely used in production line test, product sophistication and laboratory test research and development fields of power transformer, charger, switching power supply, various batteries and other industries.

Main feature

1. the fast charging charger measures the power and energy, and can be directly connected to control the voltage and output by means of communication. (CH6311P&CH6312P)
2. 500kHz high-speed sampling AD, voltage and current peak-to-peak and peak-to-peak real-time measurement ($V_{pp}/V_{p+}/V_{p-}/I_{pp}/I_{p+}/I_{p-}$).
3. 4.3-inch high-definition color screen display, simultaneously displaying the trigger interface of load and fast charging voltage.
4. Fully compatible with PD fast charging protocol, QC2.0/QC3.0 fast charging protocol and MTK PE2.0 protocol.
5. The maximum dynamic load frequency is 50kHz, the current slope can be set, and the peak voltage V_{p+}/V_{p-} can be measured in real time.


6. OCP test function, which automatically acquires OCP protection point, maximum power point (Pmax) and current voltage and current parameters.
7. One-click screen copying function, which can easily save or transfer the contents displayed on the screen.
8. USB data saving function is convenient for data recording.
9. USB firmware upgrade, keep the latest system version at all times, and make it easy to customize various functions.
10. RS232 interface is standard to facilitate signal output and data communication.

2.2 technical parameters.

Model		CH6311A	CH6312A	CH6313A	CH6314A	CH6315A
Rating	Input voltage	0 ~ 150V			0 ~ 500V	0 ~ 500V
	Input current	0.1mA ~ 30A		0.1mA ~ 60A	0.1mA ~ 15A	0.1mA ~ 30A
	Input power	150W	300W			
	Range	Accuracy			Resolution	
Load accuracy	0-9.9999V	$\pm (0.05\%+0.03\%FS)$			0.1mV	
	10V-99.999V	$\pm (0.05\%+0.03\%FS)$			1 mV	
	100V-150V/500V	$\pm (0.05\%+0.03\%FS)$			10mV	
	0-9.9999A	$\pm (0.05\%+0.05\%FS)$			0.1mA	
	10-30A/60A	$\pm (0.05\%+0.05\%FS)$			1 mA	
Rated voltage mode	1.5V-36V	$\pm (0.05\%+0.03\%FS)$			0.1mV/1mV	
	1.5V-150V/500V	$\pm (0.05\%+0.03\%FS)$			10 mV	
Rated current mode	0-3A/6A	$\pm (0.05\%+0.05\%FS)$			0.1mA	
	0-30A/60A	$\pm (0.05\%+0.05\%FS)$			1mA	
Rated resistance mode	0.05Ω-5Ω	$\pm (0.2\%+0.2\%FS)$			0.0001Ω	
	0.5Ω-50Ω	$\pm (0.1\%+0.1\%FS)$			0.001Ω	
	5Ω-500Ω	$\pm (0.1\%+0.1\%FS)$			0.01Ω	
	500Ω-5KΩ	$\pm (1\%+1\%FS)$			0.1Ω	
Rated power mode	0-50W	$\pm (0.1\%+0.1\%FS)$			mW	
	0-150W	$\pm (0.1\%+0.1\%FS)$			10mW	
	0-300W	$\pm (0.1\%+0.1\%FS)$			0.1W	
Battery test function	Input= 2-150V/500V Max measurement capacity= 999A/H Maximum discharge time=1 4294967295sec(> 7 days)					
Dynamic test mode	Minimum pulse width: 0.02ms		Maximum pulse width: 60s			
	Edge resolution: 1ms		Maximum edge time: 6S			
List test mode	Constant voltage. Constant current. Constant power. Constant resistance. Short circuit. Open circuit					


Programming test model	Scanning type: current, voltage, power critical condition: voltage threshold, DV, drop.	
Quick charge	NO	PD2.0, QC3.0, QC2.0 and PE2.0 are supported. D+D- protocol.

2.3 Front panel introduction

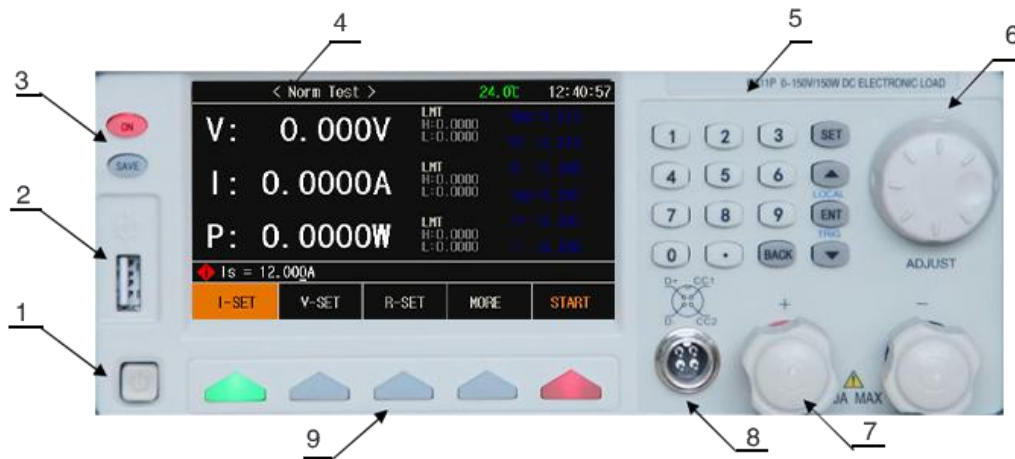

Order	Name	Description
1	Switch	Turn on and off the load.
2	USB HOST interface	Connect USB disk. Support FAT16 and FAT 32. Firmware update, data storage and load, save screen image
3	Operating function key	SAVE: Save the data to U disk, the light is blinding when data is recording
4	LCD Display Screen	Display test result, condition and system information.
5	Input key	Full-functional numerical keyboard, used to input data, or character for file name.
6	Knob	Right-left adjustment for setting data and menu operation
7	Input terminal: Red is positive and Black is negative	ⓘ Reversed polarity input will cause big current, dangerous
8	Fast charge signal communication end	According to the schematic wiring, D+/D- is QC series communication terminal. CC1/CC2 are PD communication terminals, so be sure to connect correctly!!
9	Function softkey	The function of 5 keys is changed as function page, which is not fixed. In different menu, there is different function. The function is displayed on the top of the key .


2.4 Rear Panel Introduction

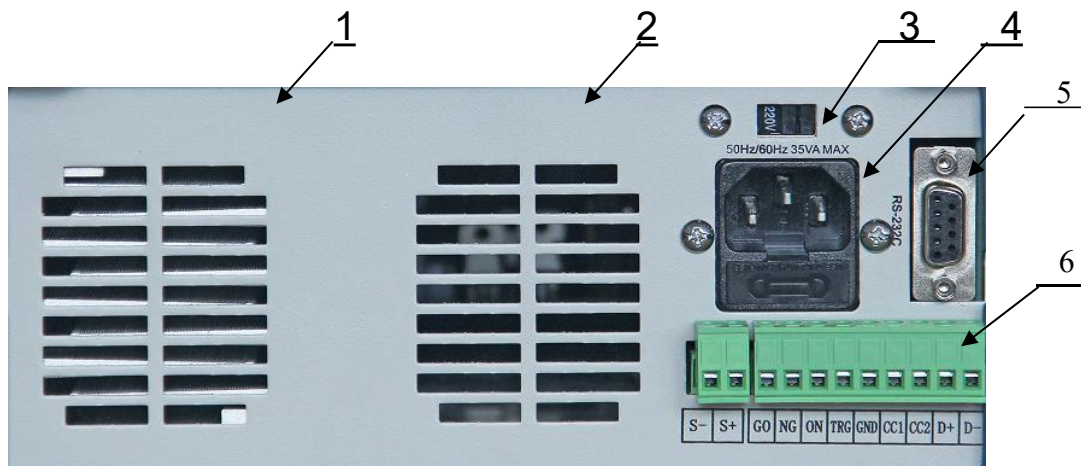



Order	Name	Description
1,2	Cooling vent	ⓘ Do not block, keep well ventilated
3	Voltage switch	For 110V voltage and 220V voltage switching, please pay attention to the correct choice
4	AC power input ⚡	⚡ includes fuse, size 1A (Customizable special voltage)
5	RS232C serial interface	The serial communication interface, parameter settings, commands, etc. of the instrument and the external device can be set and obtained by the computer to realize remote control of the instrumentless panel.
6	Terminal	Please mark the wiring according to the printed word.

2.5 Display area introduction

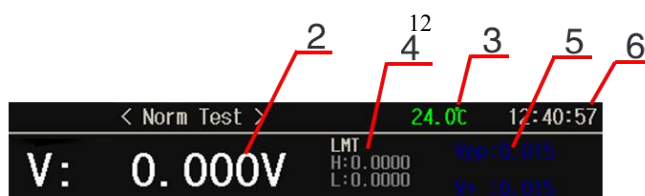
The LCD display is divided into relatively fixed areas to display specific



information for each page.

Order	Name	Description
1	Setting parameters and status bar	Parameter setting with load and help hints in menu setting
2	Main parameter display	Display real-time voltage, current and power
3	Machine internal temperature	Display the monitored internal temperature
4	Limit alarm setting value	Set the high and low limit in normal test model, alarm when over the limit, more details in 3.2.2
5	System icon display	Display system information by means of icon  U disk is available;  remote control;
6	Clock display area	Display real-time clock, change the date and time in system interface or turn off the display.
7	Operation area	Unit switching and instrument working mode setting

Quick charge display (CH6311P/CH6312P)

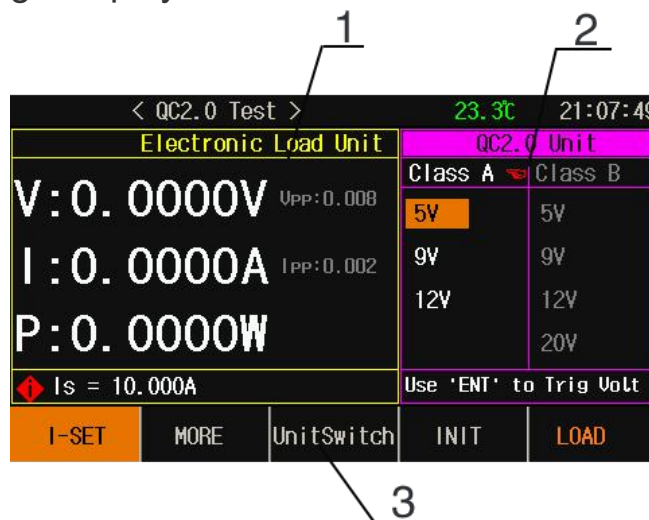

Order	Name	Description
1	Electronic load unit	Display voltage, current and power parameters of load part.
2	Fast charge voltage control unit.	PD, QC2.0 and QC3.0 are controlled by voltage, and D+D- is displayed during DPDN test. Voltage value, the upper and lower limits are set for ordinary load.
3	Operation area	Unit switching and instrument working mode setting.

Chapter III Menu Operation

The main content of this chapter: Describes the display information and operation of all menu display pages of electronic load.

3.1 Load Page




Field Name	Brief
Constant current CC (fixed)	The electronic load consumes a constant current regardless of whether the input voltage changes
Constant voltage CV (fixed)	The electronic load consumes enough current to keep the input voltage constant at the set value
Flexible definition key	This field is a flexible definition menu, determined by the options of more menus.
More	Press this button will pop up the optional function page, the menu content has fixed resistance fixed CR, power CP, CC+CV, CR+CV, short circuit, battery test, dynamic test, list test, led mode, can pass cursor selection or directly type the corresponding number selection. After selection, this option will appear in the flexible definition key position.
Start up	Used to turn load input on and off

3.1.1 Normal page test operation

Constant current mode of operation (CC)

In constant current mode, the electronic load consumes a constant current regardless of whether the input voltage changes.

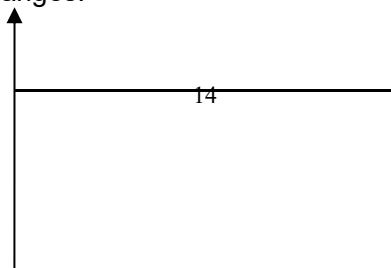

I


(set current)

Load current

V

Input voltage

Press the **【Constant Current】** key to enter the constant current mode. The button light will be on. Enter the current **I_s = 0.0000A** value to be set by the numeric keypad. The entered number will be displayed in the status bar. Press **【ENT】** to confirm. Press the **【Start】** key or the **【ON】** key to start the load measurement.


 Example: Set the constant current to 1.2345A


In the constant current mode, input 1.2345 through the numeric keypad, press **【ENT】** to confirm

In the load start state, you can use the **【▲】** or **【▼】** key to move the cursor, rotate the knob to change the setting parameters, or reset the parameters by the numeric keys, and the load will automatically follow the changed value.

Constant voltage mode of operation (CV)

In constant voltage mode, the electronic load will consume enough current to keep the input voltage constant at the set point.

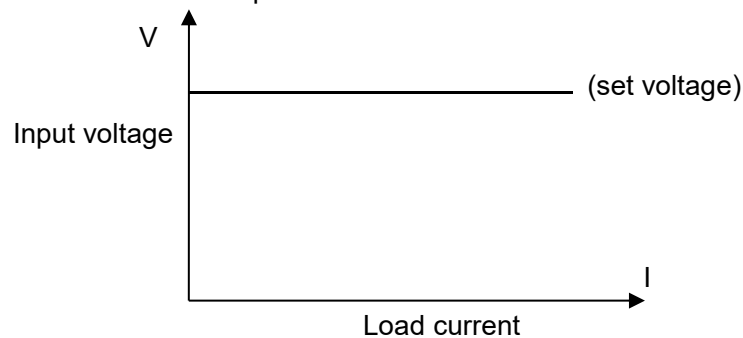

 Hint: Please refer to the constant current setting method for setting and changing the voltage setting value.


ⓘ Note: When the source voltage is less than the set value, the load will not work

at constant voltage.

ⓘ Note: The difference between the source voltage and the set voltage will fall on the source resistance and lead resistance. If the difference is large and the internal resistance is small, the load may consume a large current!


Constant power mode of operation (CP)

In constant power mode, the load consumes a constant amount of power. When the input voltage changes, the load will regulate the current to maintain the power consumed.

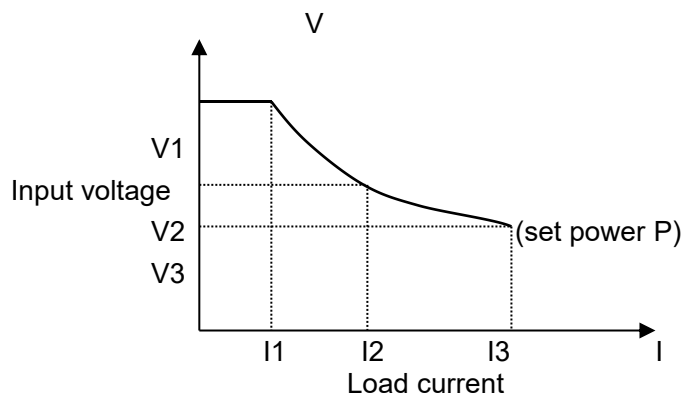


In other load modes, press the **【More】** key to enter the menu to select the constant power mode, and use the **【Start】** key to start or stop the work.


When the load is not activated, you can change the set value with the cursor and knob, or press the **【Fix Power】** key to enter the new value with the numeric keys.

 Hint: Please refer to the constant current method for changing the power setting value.

Constant resistance mode of operation (CR)

In constant resistance mode, the load is equivalent to a constant resistance, and the load consumes current that changes as the input voltage changes.

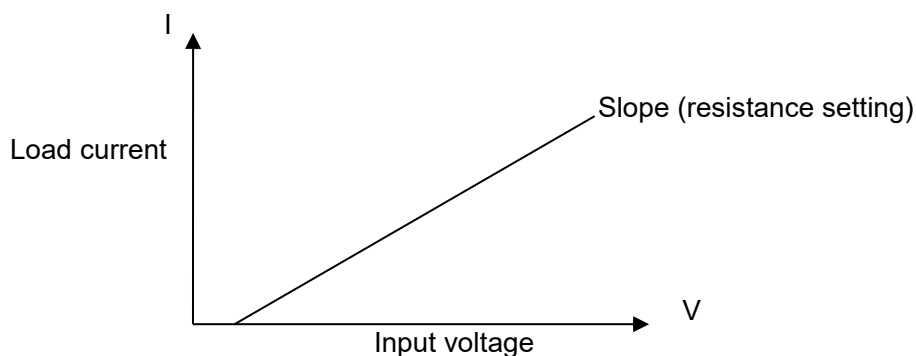

 Hint: Please refer to the constant current method to change the resistance setting value.

CC+CV mode

The CC+CV mode is a constant current plus voltage mode. The main function is to prevent damage caused by overcurrent discharge of the tested power supply. Setup and test methods:

1. In the more measurement mode, the cursor is selected to CC+CV and then press

- 【ENT】 to confirm. Press 【Constant Current】 to set the constant current parameter, and press 【Constant Voltage】 to set the load constant voltage working parameter.
- Press the start button to start the measurement. If the load meter determines that the constant current can be loaded to the set value, the load works in the constant current mode. If the load meter determines that the power supply current cannot be output to the set value, it will switch to the constant voltage working mode. The max output current.

CR+CV mode


The CR+CV mode is consistent with the CC+CV mode function. The setting method and test method refer to the CC+CV mode.

3.1.2 Quick charge QC2.0 test page (this function is only available for CH6311P and CH6312P).



Under this page, use the unit switch key to switch the load unit and QC2.0 unit, and the corresponding bright bar will indicate in the selected unit. At this time, the data of the changed unit can be set. The knob is used to select Class A and Class B, the 【▲】 or 【▼】 button is used to select voltage, and the 【ENT】 button confirms the voltage selection. The selected voltage will be displayed directly in the load unit.

3.1.3 Quick charge QC3.0 test page (this function is only available for CH6311P and CH6312P).

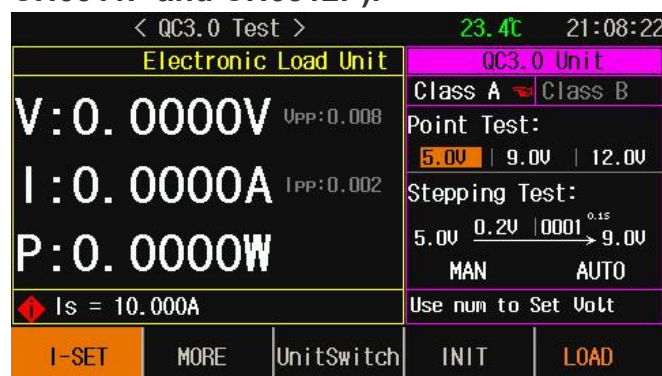

On this page, use the unit switch key to switch between the load unit and QC3.0 unit, and the corresponding bright bar will indicate in the selected unit. At this time, the data of the changed unit can be set, the knob is used to select the left and right displacement, the 【▲】 or 【▼】 button is used to select the up and down displacement, and the 【ENT】 button confirms the voltage selection. The selected voltage will be directly displayed in the load unit. During operation, the status prompt bar will prompt corresponding operation information.

3.1.4 PD2.0 test page (this function is only available for CH6311P and CH6312P).



The voltage selection on this page depends on the actual output of PD charger, which is automatically obtained by the system according to the output voltage of the charger. When the charger is inserted, there will be an initialization process. After pressing the unit switch key to the PD2.0 unit, 【 ▲ 】 or 【 ▼ 】 will be shifted up and down to select the voltage, and 【 ENT 】 will confirm the voltage selection.


3.1.5DPDN(D+D- voltage test) test page (this function is only available for CH6311P and CH6312P).




On this page, D+D- voltage of ordinary charger can be tested synchronously, and 3.3V voltage can be input by the machine for testing to test whether it is short-circuited to the ground. Press the corresponding key to select D+ short-circuit test or D- short-circuit test. In the list, D+D- voltage can be used as judgment condition.

3.2 Settings Page

Press the 【Set】 key to enter the main menu page. Use the arrow keys to turn the knob to move the cursor or directly enter the first two digits of the menu to select the menu you want to enter.

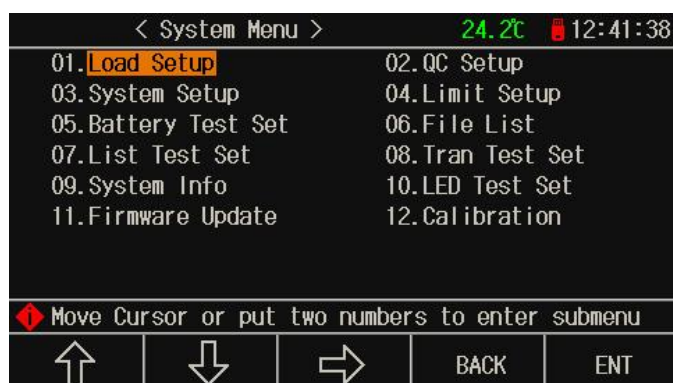

Hint: Menu display content will be different according to the model or special customization function

3.2.1 Load Settings Page

Select the cursor to load setting option under the main menu, press **【ENT】** to enter or directly press the number 01 to enter




Remote measurement

In CV, CR, CP mode, the voltage sampling accuracy will affect the working accuracy of the electronic load. When the load consumes a large current, a voltage drop will be generated on the connection line of the tested power supply to the load. To ensure measurement accuracy, the load provides a remote measurement end on the rear panel, and the user can use the terminal to measure the output of the instrument under test terminal voltage.

Use the **【ENT】** key to change the menu settings. Each press of the **【ENT】** key will switch between on and off.

Voltage remote measurement = On: Turn on the remote test, the instrument samples the voltage from the remote measurement terminal on the rear panel


Voltage remote measurement = Off: Turn off the remote test and the instrument samples the voltage from the front panel load input.


Hint: Please refer to Appendix A for the rear panel Sense interface pin configuration.

Delayed shutdown

Automatic delay shutdown can be applied to four basic load modes: constant voltage, constant current, constant power, and fixed resistance. If automatic delay shutdown is turned on, the load will be timed in seconds after the load is started. After the break, the load will automatically turn off.


Type the number key directly, press the **【ENT】** key to confirm, and enter 0 to turn it off.

Hint: the unit is seconds (s), the setting range is 1 ~ 99999s.

Hint: If the setting value is 0 or close to 0, the automatic shutdown display is "Off", which means the function is turned off.

Current range

In order to ensure the measurement accuracy, the load current is divided into two ranges: high and low. The maximum current is configured according to the type of instrument. When switching the high and low ranges, the maximum current supported under this range will change accordingly.


 Hint: Press the **【ENT】** + **【▼】** key to switch between high and low ranges.

Maximum current

The maximum load current has two main functions:


1. The settable constant current value (I_s) will be limited to below this maximum current;

2. In the case of CV, CP, CR and short-circuit test, when the load current exceeds the maximum current, the instrument will alarm and display over-current protection (OC). If it exceeds a large value, the load will automatically shut down.

 Hint: Enter the number directly when setting the maximum current, press **【ENT】** to confirm.

Voltage range

In order to ensure the measurement accuracy, the load voltage is divided into two ranges: high and low. When adjusting the range, the maximum test voltage will change correspondingly.


 Hint: Press the **【ENT】** + **【▼】** key to switch between high and low ranges.

Maximum voltage

Setting the maximum input voltage has two main functions:


1. The settable constant voltage value (V_s) will be limited to below this maximum voltage;

2. When the input voltage exceeds the maximum voltage, the electronic load will alarm and display “**Exceed Voltage!!!**” and the load will be turned off;

 Hint: Enter the number directly when setting the maximum voltage, press **【ENT】** to confirm.

Maximum power

Used to declare the maximum power that the load is allowed to consume. Once the actual power consumption exceeds this value, the instrument will alarm and display power protection (OP), which may cause the load to automatically shut down.

 Hint: Enter the number directly when setting the maximum power, press **【ENT】** to confirm.

Starting voltage

The minimum starting voltage can be applied to four basic load modes: constant voltage, constant current, constant power, and fixed resistance. If the minimum starting voltage is turned on, after the load is started, when the input voltage is less than the minimum starting voltage, the load will be in the waiting process. The status information area is displayed as “。 。 。 。” and the load is automatically started once the input voltage exceeds

the minimum start up voltage.

☰ Example: If the minimum starting voltage is set to 1.25V, select menu to minimum starting voltage, type **【1】 【.] 【2】 【5】** , press **【ENT】** to confirm, the default unit is V.

☰ Hint: If the set value is 0 or close to 0, the minimum start voltage is displayed as “Off”, which means the function is turned off.

Shutdown voltage

The minimum shutdown voltage can be applied to four basic load modes: constant voltage, constant current, constant power, and fixed resistance. If the auto-shutdown voltage is turned on, after the load is started, after the input voltage is less than the auto-shutdown voltage, the load will be Automatically shut down.

☰ Hint: The setting method is the same as the minimum starting voltage.

☰ Hint: If the set value is 0 or close to 0, the auto-shutdown voltage is displayed as “Off”, which turns off this function.

Rising rate

Used to set the load climb rate to reduce the overcurrent surge caused by sudden load in some cases. After inputting the data, press **【ENT】** to confirm, the maximum settable current is 3.000A/uS.

Rate of decline

Used to set the time from normal working state to no load. After inputting the data, press **【ENT】** to confirm, the maximum settable current is 3.000A/uS.

☰ Hint: After all menu settings are completed, you can press **【Enter Test】** to enter the main test page directly, or press the **【Back】** key to return to the main menu.

3.2.2 Quick charge setting page



On this page, you can set the type of fast charge, and you can select normal test (normal load mode), QC2.0 mode, QC3.0 mode, PE2.0 mode, DPDN mode and PD2.0 mode. the mode selection here determines the type of list programming test. The QC initialization function can be selected from fast and slow, which is mainly used for some chargers with slow initialization. If the voltage trigger is abnormal in fast state, slow speed can be used. Wake-up current setting: It is mainly used for wake-up before test of mobile power supply with no-load protection. Initialization current: it is mainly used in the setting that some PD

chargers need to bring current before initialization. PE trigger current: the current setting for triggering PE charger is 0.3A minimum and 2A maximum, and is generally set to 0.5a.. On this page, you can set the type of fast charge, and you can select normal test (normal load mode), QC2.0 mode, QC3.0 mode, PE2.0 mode, DPDN mode and PD2.0 mode. the mode selection here determines the type of list programming test. The QC initialization function can be selected from fast and slow, which is mainly used for some chargers with slow initialization. If the voltage trigger is abnormal in fast state, slow speed can be used. Wake-up current setting: It is mainly used for wake-up before test of mobile power supply with no-load protection. Initialization current: it is mainly used in the setting that some PD chargers need to bring current before initialization. PE trigger current: the current setting for triggering PE charger is 0.3A minimum and 2A maximum, and is generally set to 0.5a..

3.2.3 Limit Settings Page



The voltage, current, and power judgment parameters can be set under this page, and the judgment result is displayed in the display area of the main test interface. If the value exceeds the set value, the indication will be highlighted in red.

Hint: Move the cursor to the position you want to set, press the **【ENT】** key to confirm the number directly. The limit judgment can be turned on or off by pressing the **【ENT】** key. After the setting is completed, press the **【Enter Test】** key to directly enter the main test page, or Press the **【Back】** key to return to the main menu.

3.2.4 System Settings Page



In this interface, you can set and change the instrument system style and application. Press **【ENT】** to switch the menu content at the cursor. Press the number key and press the **【ENT】** key to confirm the date and time.

Menu name	Secondary menu content
Display style	Elegant red

	Gorgeous purple
	Trendy and cool black
	Elegant blue
Trigger source	Manual:Triggered by the “TRIG” key on the instrument panel
	External:External trigger,triggered by Sense on the rear panel
	Bus:Triggered by programmable commands on RS232C interface
Language	Chinese
	English
Communication mode	RS232C
	USB-CDC
	USB-TMC
Boot settings	Defaults
	Last value
Local address	After entering the number, press 【ENT】 to confirm
Touch-tone	Turn on
	Shut down
Baud rate	4800 9600 19200 38400 57600
Keyboard lock	Lock 0-9 numeric keypad when open
	Shut down
Multi-machine mode	Stand-alone
	Multi-machine
Knob lock	Turn on
	Shut down
Factory settings	After the recovery is confirmed, all settings will be restored to the factory values. Please operate with caution.
Acquisition frequency	Used to set the data acquisition time when u disk data is saved.
Date	Press the number key directly and press the 【ENT】 key to confirm and move the cursor to the next item.
Time	Press the number key directly and press the 【ENT】 key to confirm and move the cursor to the next item.

3.2.5 File List Page

No.	NAME	DATE
1	.	.
2	.	.
3	.	.
4	.	.
5	.	.
6	.	.
7	.	.
8	.	.
9	.	.
10	.	.

22.6C 08:22:04
! Use number keys to input No. Memory:ROM

LOAD	SAVE	DELETE	EXIT
------	------	--------	------

Storage and call

Through the store and recall functions, parameters can be saved instantly, measurement settings saved to an internal ROM or external USB memory, and save the measurement node or screen snapshot to the external USB memory.

Hint:U disk storage only supports USB 2.0 format U disk

Storage function

The following save functions can be implemented through the instrument's storage system:

- Instantly save user correction data and settings;
- Instantly save measurement setup parameters, system configuration parameters;
- Save the measurement setup parameters as a file in the internal ROM memory or external USB memory;
- Save the screenshot file to USB memory (screen capture function);
- Save the measurement results to the USB memory (data logging function).


Call function


After storage, the following call functions can be implemented:

- Automatically call user correction data and settings in real time;
- Instantaneously call the measurement setup parameters automatically;
- Automatically call system configuration parameters in real time;
- Loading the measurement settings file in the internal ROM or external USB memory through the file management function;

Storage media type

The instrument uses the following media to save information:

Media type	Use
Internal RAM (battery powered)	Instantly save measurement parameters and system configuration
Internal FLASH ROM	User correction data and its settings, measurement settings file
External USB memory (U disk)	Measurement setup file, screenshot file, data log file  Hint:U disk storage only supports USB 2.0 format U disk

Hint:On the file list page,type the number directly,0-100 for RAM storage,100 or more for U disk storage,the memory type will be displayed on the right side of the operation bar,then enter the file code and press the save button to confirm the save.

U disk file structure

After connecting the USB memory to the instrument, the instrument organizes and uses the folders and files on the memory according to a predetermined structural scheme.

As shown in the following table:

File type	Extension name	Max number of files*1	File path*2
Measurement setup file	EST	500	\CH6311\SETUP
Data Record File	CSV	200	\CH6311\DATA
Screen snapshot file	GIF , BMP , PNG	200	\CH6311\IMAGE
Upgrade file	36U	10	Root directory

Note *1. Refers to the maximum number of extensions using the same extension;

Note *2. Folders differ according to different instrument models

Note: The folder is automatically created by the instrument. In addition to the upgrade file, the file name is also automatically generated by the instrument.

The USB memory should conform to the FAT16 or FAT32 file system and be formatted using FAT16 or FAT32.

If there is a U disk that the instrument can't recognize, please use another formatted U disk.

Note: BEICH Electronics is not responsible for the loss of U disk data caused by the use of USB storage devices on this instrument.

 -

Save the file to the U disk

After connecting the USB memory (U disk) to the instrument's USB (HOST), you can use the **【SAVE】** key on the panel to save the test results or screenshots to the U disk.

Save the measurement results to the U disk

Press **【SAVE】** on any page. The **【Graphics】** **【Data】** prompt button will be displayed under the instrument display. Press the **【Data】** button on any measurement page to save the measurement result to the U disk in CSV format, and press the **【Graphics】** button. You can save the current display interface screenshot, the **【SAVE】** key will flash during data saving, press **【SAVE】** key again to finish saving, **【Graph】** save **【SAVE】** key is always on, after the save is finished, it can be downloaded to PC after saving. Open and use these files on your machine.

A single CSV or TXT file can store up to 65536 rows of test data. After this maximum data is reached, the instrument automatically stops data logging.

Warning: During the process of writing data to the U disk , it is forbidden to pull out the U disk. Otherwise, the U disk or U disk file system may be damaged.

Note: The data record files are numbered in the order of BEICH000~BEICH199. The user cannot specify and modify the stored file name. The data is written to the U disk for some time. During this process, the measurement may stop responding for a short time.

The following conditions automatically end the data record in an abnormal way:

- Failed to write data to U disk

- The data line written to a file is out of range

Save the screenshot to the U disk

In any display page, you can save the current screen display content to the U disk according to the BMP format. After saving, you can download and use these files on the PC.

☞ **Press the following procedure to save the screenshot:**

Step 1: Connect the U disk and confirm that the instrument has successfully installed the U disk. The U disk graphic is displayed in the upper right corner of the display

Step 2: Select the page that requires a screenshot;

Step 3: Press the **【SAVE】** key and the **【Graphics】** **【Data】** prompt button is displayed at the bottom of the screen. Press the **【Graphics】** key to start saving. The **【SAVE】** key is always on, and the display is off after the save is completed. The screenshot is in the specified image format. The file is saved to the U disk.

Note: *The screen shot files are numbered in the order of BEICH000~BEICH199. The user cannot specify and modify the stored file name.*

File List

Measurement setup file summary

s
p
a
g
e
.

The instrument organizes the above settings into a file that can be saved and recalled as a whole; it can also assign a name (remark information) to the saved file, and the name is saved with the file.

The measurement settings file can be saved in the following media by number:

Media	Storage Order	Use
Internal RAM (battery powered)	0	File not visible, instant save, automatic call
Internal FLASH	1~100	Store and call through file list
External USB memory	101~550	Store and call through file list storage location: \CH6311\SETUP *1 File name: 51.EST~550.EST

Store/call measurement settings

No.	NAME	DATE
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		

Field information for the file list page:

Field	Description
Serial number (No.)	The stored setup file serial number is displayed, 1~100 is the internal ROM memory, and 101~550 is the external USB memory. Select the file serial number to be operated by using the cursor keys or directly typing an array: 【SAVE】 key storage media selection
Name	Displays the comment information of the stored settings file for naming the measurement setup parameters, not the file name stored on the U disk.
Date	Displays the system time when saving.
Memory	Displays the currently valid storage media and automatically converts it according to the file number.

☞ Use the cursor keys to move the field, select the file number to be operated, press the function soft key to operate:

Function softkey _____ Operational function _____

Load Available when the file exists, calling the specified settings file

There is a confirmation action when loading.

Save Save the current measurement setup parameters, ask for the input file name before saving, you can directly confirm the default <Unnamed>

Note: The file name required to be entered here is actually the remark information of the measurement settings file!

Delete Available when the file exists, delete the specified settings file

There is a confirmation action when deleting.

Exit Exit the file list and return to the page before the file list.

3.2.6 Dynamic Test Page



Dynamic testing allows the load to be switched between two voltages or currents. This feature can be used to test the dynamics of the power supply.

1. Dynamic testing is set up and tested as follows

Step 1: Select the load type for dynamic test, press **【ENT】** to select constant current or constant voltage

Step 2: Select the load dynamic mode, press the number directly and press the **【ENT】** key to confirm;

Continuous: The load is automatically converted after a delay of the corresponding time;

Trigger: The pulse width does not work and the load switches under the action of the trigger signal.

Pulsation: The load works with A value. After triggering, it converts to B value, delays B pulse width and then converts to A value;

Step 3: Set the value of point A. After entering the load A menu, type the number directly and press **【ENT】** to confirm. The unit depends on the load type as A or V.


Step 4: Set the pulse width of point A. After entering the pulse width A menu, type the number directly and press **【ENT】** to confirm, the unit is 1ms.

Step 5: Set the B point value and the B point pulse width in turn.


Step 6: Set the edges AB and BA, set the time from the load value of point A to the load value of point B. After typing the array, press **【ENT】** to confirm, the unit is ms.

Step 7: After the setting is completed, press to enter the test and enter the test page directly. Press the start button to start the measurement.

After the dynamic test is started, the load will continuously switch between the A value and the B value, maintaining the width A and the width B, respectively.

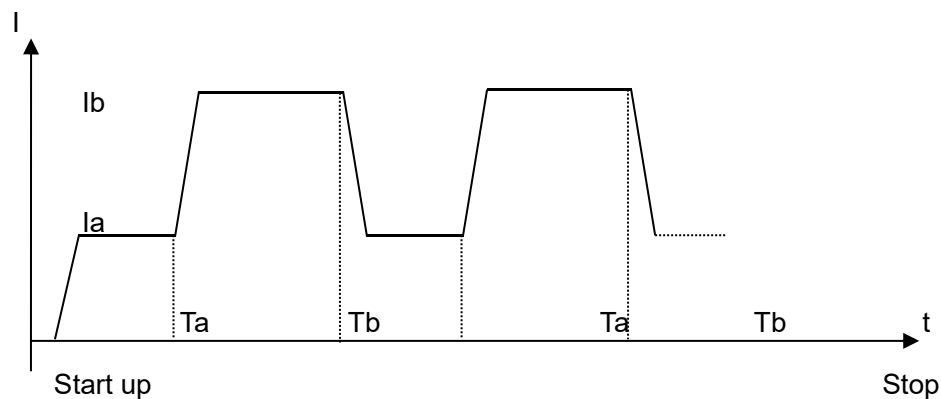

2. Time measurement mode.

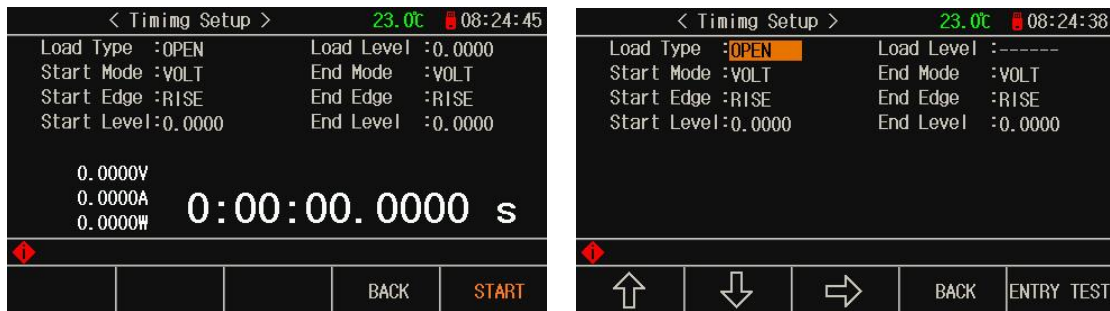

The function is used to test the time interval between two trigger signals, and the system automatically obtains two trigger signals under the predetermined load condition. Time between signals with an accuracy of 0.1 ms.

The load types can be selected as open circuit, constant current, point voltage, constant resistance and constant power.

The load can be directly input by pressing the numeric keys.

The start and end signals can be set as voltage, current or external trigger.

The start and end edges can be set to rise or fall.

The starting level can be directly input by pressing the numeric keys.

3. Overvoltage protection test mode (OVP).



This function is used to measure the input voltage and falling edge, and is triggered when the falling edge set voltage is reached, at which time the voltage is the measured electricity. Source overvoltage protection point, the time interval from peak to trigger is the OVP response time of the tested power supply.

4. Overcurrent protection test mode (OCP).



OCV test function is used to capture the critical parameters before power protection. The system automatically steps to the end point at the preset scanning current. Stop when the trigger level is reached, and display the captured critical value.

3.2.7 List Test Page

Num		T_Mode	T_Lev	Del	Compa	Min	Max
01	--	Open	0.000	005	InVol	0.000	0.000
02	--	CC	0.000	005	InVol	0.000	0.000
03	--	CC	0.000	005	InVol	0.000	0.000
04	--	CC	0.000	005	InVol	0.000	0.000
05	--	CC	0.000	005	InVol	0.000	0.000

Use 'ENT' to set compare type

↑ ↓ ⇨ BACK ENTRY TEST

The list test function can be automatically converted at a set time in different load modes.

For power products and chargers, through multi-parameter hybrid testing, you can more fully understand the working characteristics of the tested products in various applications.

The instrument can set up up to 15 different types or sizes of loads, single-step automatic test time 1 ~ 60000s, and can compare the current, voltage or power parameters in each step of the test, make a pass or fail judgment, all set After the determined number of steps is completed, the overall discrimination result (PASS/FAIL) is given in the status information area. All the test steps are PASS, and any step is FAIL.

Menu name	Secondary menu content
List steps	Press the number keys to enter the total number of steps in the list. Press 【ENT】 to confirm, up to 15 steps.
Step Mode (Press 【ENT】 to switch)	Continuous: automatically switches to the next step after the set delay time Trigger: Wait for the trigger signal to switch to the next step after the set delay time
Cyclic test (Press 【ENT】 to switch)	Open: Cycle test until you press the stop button Close: stop after the test is completed according to the set number of steps
List alarm (Press 【ENT】 to switch)	Qualified: buzzer alarm prompt when qualified Failed: Buzzer alarm prompt when unqualified

Starting voltage	Press the numeric keys to input the voltage value. The system will automatically start the measurement when it is judged that there is higher than this voltage input, generally set to 80% of the no-load input voltage.
Load type (Press 【ENT】 to switch)	Open circuit
	Short circuit
	Constant current
	Constant voltage
	Constant resistance
	Constant power
Load value	Press the number key to enter and press the 【ENT】 key to confirm
Delay	Input number and press 【ENT】 to confirm,unit is 0.1s
Comparison item	Close: test data is not compared
	Press voltage: test data is compared by voltage
	By current: test data is compared by current
	By power: test data is compared by power
Lower limit	Press the number key to enter and press the 【ENT】 key to confirm
Upper limit	Press the number key to enter and press the 【ENT】 key to confirm

☰ Hint: Move the cursor to press all the data and press the test button to enter the test page




☰ Hint: Enter the test page to start the measurement, the page displays the measurement and judgment results of the current test step.

Num		T_Mode	T_Lev	Del	Compa	R_Lev	Result
01	--	Open	5.221	005	InVol	0.001	FAIL
02	--	CC	5.105	005	InVol	0.000	FAIL
03	--	Open	5.230	005	InVol	0.001	FAIL
04	--	CC	5.106	005	InVol	0.000	FAIL
05	--	Open	5.231	005	InVol	0.002	FAIL

☰ Hint: Enter the test results page, you can see the test data and judgment results for each step

3.2.8 LED Test Page

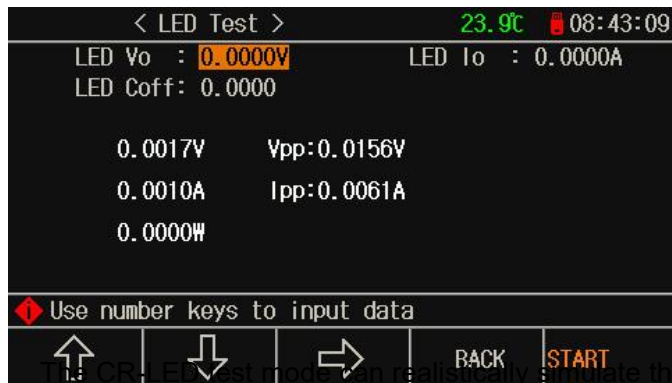

The CR-LED test mode can realistically simulate the characteristics of the LED lamp. By increasing the on-voltage setting of the diode, the working principle of the diode is completely simulated, so that the test voltage and current reach a normal stable value, and the voltage in the conventional constant resistance mode is avoided. The current is unstable or oscillating, which truly reflects the actual loading of the LED driver.

Parameter	Description
LED Vo	LED power supply voltage output reference value
LED Io	LED rated output current
Rd Coeff	Rd coefficient, generally set to 0.1-0.3


After all the parameters are set, press the start button to start the test. The display interface will display the voltage, current, resistance and power value of the current power supply under test.

3.2.9 System Information Page



Display all system information and installed modules of the modified machine. No changes can be made on this page.

3.2.10 Firmware Upgrade Page

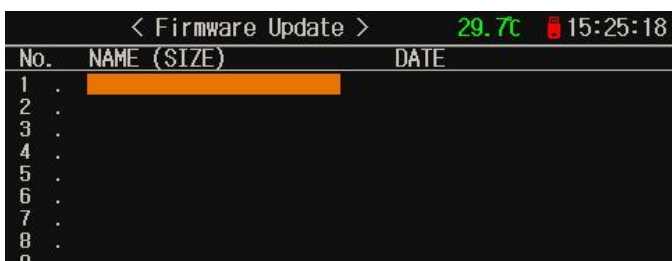

All information about the system of the machine and the installed modules are displayed. No changes can be made to this page.

The upgrade function can only be enabled after the U disk connected to USB (HOST) is effectively recognized.

The instrument can be easily upgraded to the firmware. If there are software problems during the process, you can contact BEICH Electronic Co., Ltd. at any time.

☞ Upgrade the firmware as follows:

Step 1: Download the upgrade file provided by the company. The file name generally includes the instrument model and the extension is 97F. If it is a compressed package, please decompress it;

Step 2: Copy it to the root directory of the formatted FAT32 or FAT16 U disk;

Step 3: When the instrument is to be upgraded, insert the U disk into the USB-HOST interface on the front panel.

Step 4: After the U disk is successfully installed, select the “Firmware Upgrade” menu to enter the firmware upgrade display page, and display the list of upgrade files on the U disk (up to 10). The file name is displayed by the instrument model and update time.

Note: The instrument only displays up to 10 upgrade files. You can use the PC file manager to delete some invalid files.

Note: Files that match the upgrade file format can be displayed, but will only be installed by the instrument after verification by the upgrade.

Step 5: Use the cursor keys to select the upgrade file suitable for this machine, and press the “Upgrade” function soft key;

Step 6: After confirming the upgrade operation, the instrument verifies the upgrade file. If the verification is correct, the upgrade file is installed into the FLASH ROM and automatically restarted after the installation is completed.

You can check the latest upgraded firmware version on the System Information page.

Note: You cannot power off during the upgrade process. Otherwise, the instrument firmware may be damaged and cannot work. You need to return to the factory for repair.

Appendix A Remote measurement and external trigger

A1 Remote measurement

When the load consumes a large current, a voltage drop will be generated on the connection line of the tested power supply to the load, thereby affecting the voltage measurement accuracy. In CV, CR, CP mode, the voltage sampling accuracy will affect the working accuracy of the electronic load.

The purpose of the remote measurement is to not measure the voltage from the load input terminal, but to measure the voltage directly from the power supply under test through two other test leads.


The two voltage sampling lines measured at the far end are on the rear panel Sense interface.

To use remote measurements, the remote measurement switch must be turned on in the load settings.

A2 External trigger

In the dynamic and list test, it may be necessary to start the next load conversion by “trigger”. The trigger has three types: manual, external and bus, which are triggered externally on the rear panel Sense interface.

Inputting a low level with a width of not less than 100us at the trigger input forms a valid trigger.

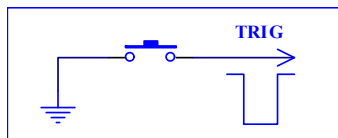

It must be considered that switching jitter can cause false triggering.

A3 Pin configuration

The Sense interface uses the DB9 core pin connector. The pin functions are as follows:



- ① S- and S+ are used as remote input, please pay attention to the polarity.
- ② GO and NG are used as pass/fail signal output, please do not apply any external voltage and current source!
- ③ On and GND are used as external starting, please do not apply any external voltage and current source!
- ④ Trg and GND are used as trigger inputs, so do not apply any external voltage and current source!
- ⑤ CC1 and CC2 are the signal communication of PD fast charge, please do not apply any external voltage and current source!
- ⑥ D+ and D- are the signal communication of QC fast charge. Do not apply any external voltage and current source!

Appendix B Remote Control

The main content of this chapter: the instrument can use RS232C serial interface, USB-CDC or USB-TMC for data communication and remote control without instrument panel, but can not be used at the same time; they share the standard SCPI instruction set of the instrument, but use different hardware configurations. And communication protocols. This chapter describes how to use the interface. For details on the use of interface commands, see the "CH97 Programming Protocol."

B1 RS232C Remote control system

The standard RS232C interface of the instrument can be used to communicate with computers and PLC, providing the cheapest and convenient conditions for data acquisition and statistical analysis. The instrument provides a wealth of program control commands, through the RS232C interface, the computer can perform almost all functions on the instrument panel.

RS232C Bus


Although RS-232C can be completely replaced by USB communication scheme, some industrial applications and PLC control are still in use, and have a very wide application base. The standard RS-232C interface uses a 25-pin connector (basic elimination) and a 9-pin connector.

Like most serial ports in the world, the serial interface of this instrument is not strictly based on the RS-232 standard, but only provides a minimal subset. The following table:


Signal	Symbol	Connector pin number
Send data	TXD	3
Receive data	RXD	2
Ground	GND	5

RS232C Configuration

The instrument uses a standard 9-pin pin DB connector, the right picture shows the connection cable:

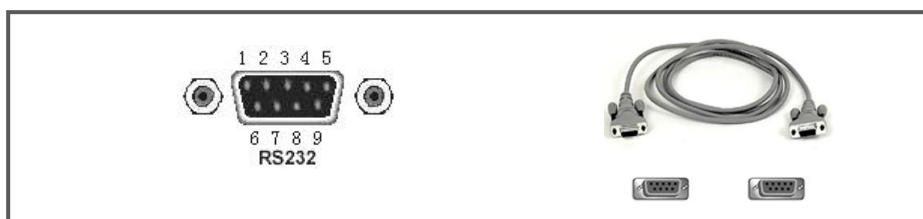

Connect to the HOST computer using the RS232C serial communication cable. The most basic connection scheme is as follows:

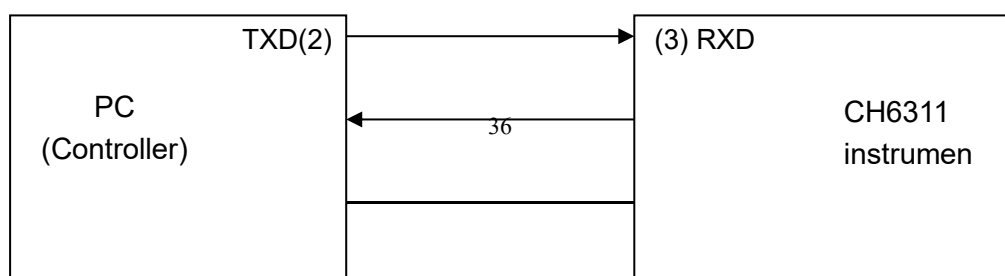

RXD(3) (2) TXD
GND(5) (5) GND

RS232C Parameter

Transfer method	Full-duplex asynchronous communication with start and stop bits
Baud rate	1200bps, 9600bps, 19200bps, 38400bps , 115200bps
Data bit	8 BIT
Stop bit	1 BIT
Check	No
Terminator	CR, LF, CR+LF optional
Contact method	Software contact
Connector	DB9 core